

9 Amp Bidirectional PWM Motor Controller with Braking BIDIR-309

The BIDIR-309 is a fully solid-state motor controller that allows you to control the speed and direction of a brushed DC motor using a potentiometer or a 0-5V voltage level. Logic DIR and BRAKE inputs control motor direction and braking. Automatic current limiting protects the controller and motor from overload conditions. Additional safety features include reversed-battery protection, over-temperature protection, and over/under-voltage protection. Optional soft-start ramps up the speed of the motor when starting and reversing to limit stress to the mechanical linkages and power supplies. Use of a high efficiency full H-bridge allows for minimal power loss while delivering up to 9 amps to the motor.

Features:

- Forward / Reverse Control
- Braking input (full brake)
- Logic Enable input
- 9 Amps maximum continuous current
- 0 – 100% pulse width output range
- 5k potentiometer or 0-5V control
- Jumper-selectable soft-start function
- Over-current protection
- Over-temperature protection
- Over/under voltage protection
- Reverse polarity protection
- LED status indicator
- Low ESR, long-life filter capacitors

Absolute Maximum Ratings:

Parameter	Max	Units
Continuous Output Current	9	A
Continuous Input Voltage	30	V
Instantaneous Input Voltage (t<0.1 s)	36	V

Warning – operating at or above the absolute maximum ratings may damage your controller or your equipment under control.

Operating Parameters:

Parameter	Min	Typical	Max	Units
Input Voltage	6	12	26	V
Continuous Output Current	--	--	9*	A
Digital Logic Input Low Level	0	--	1.5	V
Digital Logic Input High Level	3.5	--	5	V
Digital Logic Input Current	-0.2	--	1	mA
Digital Input Capacitance	--	0.1	--	uF
Analog Voltage Input	0.0	--	5.0	V
Analog Voltage Input Current	0.0	0.05	0.1	mA
Potentiometer Total Resistance	1	5	30	kΩ
Soft Start from Disabled Mode, Ramp Rate**	--	100	--	% / s
PWM Frequency	1.2	1.5	1.8	kHz
Quiescent Current Drain	10	20	25	mA
Temperature	-40	25	+60	°C

* Internally limited

** When soft-start is enabled.

Pin-out:

Pin Label	Function	Active H/L
P-	Lower pin of potentiometer (GND)	--
CN/D	Wiper of potentiometer	--
P+	Upper pin of potentiometer (5V)	--
EN	PWM output enable (internal pull-up)	H = enable L = disable
DIR	Direction	L = forward H = reverse
BRK	Brake Input	H = brake mode L = normal mode
M-	Negative output to motor	--
M+	Positive output to motor	--
GND	Ground from power supply	--
V+	Positive Power Supply	--

Typical Connections:

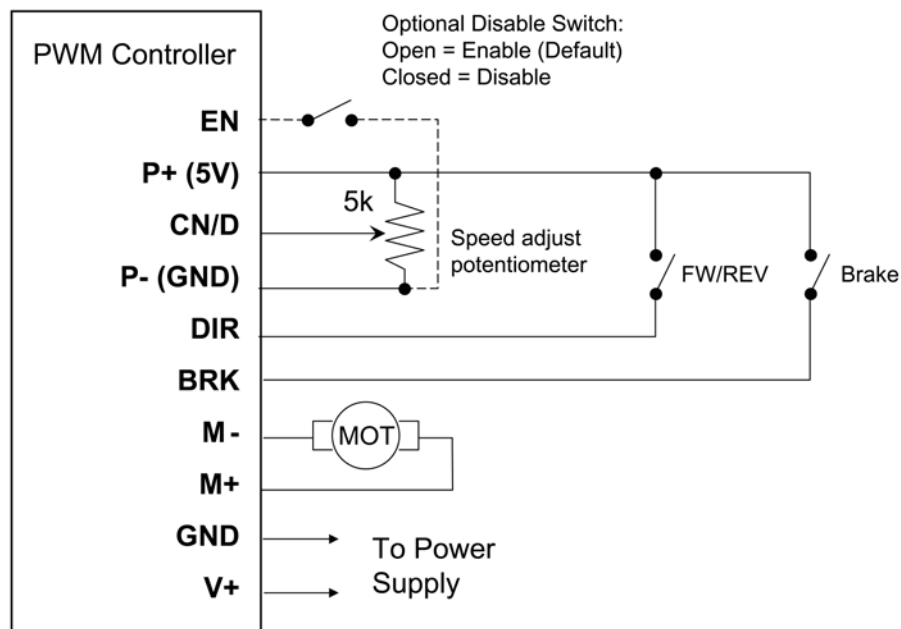


Figure 1: Connection Diagram

Operation:

A potentiometer of 1k – 30k can be used to control the pulse width. Alternatively, a varying voltage (0 – 5 V) level applied between the CN/D and P- pins can be used as well. The voltage input is converted to a pulse width at the output (0 – 100%).

There is a built-in dead-band for potentiometer operation that sets the duty cycle to:
0% for any voltage level < 0.10 V.
100% for any voltage level > 4.90 V.

This dead-band along with digital filtering ensures smooth and reliable operation.

Output Enable:

The output is enabled by default and the EN pin is internally pulled up. Bringing the EN pin low immediately brings the PWM output to 0%, allowing the motor to coast. Allowing the pin to return high re-enables the PWM output at the previous duty cycle.

Direction:

A switch can be connected between the DIR input and P+ to reverse the direction of the motor. Alternatively, a 5V signal applied to the DIR input will also reverse the motor. While reversing quickly is supported, rapid switching of directions without braking first could result in excessively high currents that may shorten the life of the controller.

Brake:

A switch can be connected between the BRK input and P+ to cause the motor to brake by shorting the motor terminals together. Alternatively, a 5V signal applied to the BRK input will cause the motor to brake. The PWM level does not affect braking intensity - braking is always set to 100% when activated.

Soft Start:

If the soft-start feature is enabled by installing the SS jumper, the output is automatically ramped up back to the original PWM level at a rate of 100% per second when the controller is switched from disabled to enabled. Soft-start is also activated when the direction is switched while the motor is running. This reduces the stress placed on power supplies and mechanical linkages as the motor comes back up to speed.

LED Status Indicators:

During normal operation, the GREEN status LED blinks slowly. During current limiting operation, the RED status LED will light.

Protection Systems:

The controller is protected from a reversed V+ and GND power connection. However, triple check wiring before applying power to ensure that power is not unintentionally applied to the M+ and M- terminals.

In the event the controller overheats, the controller will shut down until the temperature drops. The maximum H-bridge chip temperature is 150°C. During normal operation, the chip should never reach this temperature.

The controller will shut down if the voltage is too low to sustain proper operation. It will also be disabled if the voltage exceeds the maximum allowable operating voltage of 30 volts. Please note that while the controller will shut down, excessive voltage beyond 33 volts will still cause irreversible damage to the unit.

Application Notes:

Ensure that the controller is wired correctly before applying power. Always turn off the power supply before making any changes to the wiring.

PWM controllers switch currents at high frequencies to vary the average power to the load. This switching can cause undesirable RF interference. To minimize such interference, it is recommended to twist the input V+ and Ground wire pair as well as the M+ and M- wire pair.

Ensure that the controller has adequate air flow for proper cooling. If operating for extended periods of time in high temperature environments, a cooling fan may be necessary.

Use the shortest possible wiring between the load and controller, and between the controller and the power source. Ensure that the cables carrying the load current are adequately sized. If the wiring from the power source to the controller is more than 12 inches long, a 470 uF 50V filter capacitor should be connected directly to the V+ and GND terminals of the PWM controller. Inadequate power supply filtering or other causes leading to a high impedance path to the power supply will result in higher losses in the filter capacitor and wiring, and may damage the load and/or controller.

30-Day Limited Warranty:

Subject to the provisions described below, CRITICAL VELOCITY ENTERPRISES, LLC ("Critical Velocity") warrants this product to be free from defects in material and workmanship for thirty (30) days from the date of purchase by the original consumer. If any part is found to be defective during the warranted period, it will be repaired or replaced with the same or functionally equivalent product by Critical Velocity, at its discretion, free of charge provided you: (1) return the failed product to Critical Velocity with shipping prepaid, and (2) provide Critical Velocity with proof of the original date of purchase. Repaired or replacement products will be returned to you with shipping charges prepaid.

Replacement products may be refurbished or contain refurbished materials. If Critical Velocity, by its sole determination, is unable to repair or replace the defective product, it will refund the purchase price of the product. This warranty does not apply if, in the judgment of Critical Velocity, the product fails due to damage from shipment, handling, storage, accident, abuse or misuse, or if it has been used or maintained in a manner not conforming to product manual instructions or has been modified in any way. Repair by anyone other than Critical Velocity will void this warranty. The maximum liability of Critical Velocity under this warranty is limited to the purchase price of the product covered by the warranty.

EXCEPT AS SPECIFICALLY PROVIDED IN THIS AGREEMENT OR AS REQUIRED BY LAW, THE WARRANTIES AND REMEDIES STATED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS, ORAL OR WRITTEN, EXPRESS OR IMPLIED. ANY AND ALL OTHER WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT ARE EXPRESSLY EXCLUDED. CRITICAL VELOCITY SHALL NOT UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGES RESULTING FROM USE OR MALFUNCTION OF THE PRODUCTS, LOSS OF PROFITS OR REVENUES OR COSTS OF REPLACEMENT GOODS, EVEN IF CRITICAL VELOCITY IS INFORMED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES.

UNLESS EXPRESSLY APPROVED IN WRITING BY AN AUTHORIZED CRITICAL VELOCITY REPRESENTATIVE, CRITICAL VELOCITY PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE.